■ 2014年6月20日更新情報

Panasonic製ナビゲーション[C9NC V6 650] 12年モデルWALKMAN®対応一覧

モデル名	ミュージック(音楽)	フォト(画像)	ビデオ(動画)
NW-E305/E307	0	×	×
NW-E405/E407	0	×	×
NW-E505/E507	Ö	×	×
NW-E002/E003/E005	0	×	×
NW-E013/E015/E016	0	×	×
NW-E023F/E025F/E026F	0	×	×
NW-E042/E043/E044	0	×	×
	0		
NW-E052/E053		×	×
NW-E052K/E053K	0	×	×
NW-E062/E063	0	×	×
NW-E062K/E063K	0	×	×
NW-E083/E083K	Δ※1	Δ※1	×
NW-A605/A607/A608	0	×	×
NW-A805/A806/A808	0	0	0
NW-A916/A918/A919	0	0	0
NW-A828/A829	0	0	0
NW-A845/A846/A847	0	0	0
NW-A855/A856/A857	0	0	0
NW-A865/A866/A867	0	0	0
NW-S203F/S205F	Ö	×	×
NW-S603/S605	0	×	×
NW-S703F/S705F/S706F	0	×	×
NW-S615F/S616F	0	Ô	Ô
NW-S636F/S638F/S639F	0	0	0
NW-S715F/S716F/S718F	0	0	0
NW-S736F/S738F/S739F	0	0	
			0
NW-S644/S645	0	0	0
NW-S744/S745/S746	0	0	0
NW-S754/S755/S756	0	0	0
NW-S764/S765/S766	0	0	0
NW-S774/S775	0	0	0
NW-S784/S785/S786	Δ※1	Δ <u>*</u> 1	Δ※1
NW-S636FK/S638FK	0	0	0
NW-S736FK/S738FK	0	0	0
NW-S644K/S645K	0	0	0
NW-S744K/S745K	0	0	0
NW-S754K/S755K	0	0	0
NW-S764K/S765K	0	Ō	0
NW-S774K/S775K	0	0	0
NW-S784K/S785K	Δ※1	Δ※1	Δ※1
NW-S764BT	0	0	0
NW-S774BT	0	0	0
NW-F805/F806/F807	×	×	×
NW-F805/F806/F807			
*	×	×	×
NW-F805BT	×	×	×
NW-F885/F886/F887	×	×	×
NW-X1050/X1060	0	0	0
NW-Z1050/Z1060/Z1070	×	×	×
NW-ZX1	×	×	×
NW-M505	×	×	×
NW-HD1	×	×	×
NW-HD2	×	×	×
NW-HD3	×	×	×
NW-HD5/HD5H	×	×	×
NW-A1000/A1200	×	×	×
NW-A3000	×	×	×
NW-E103/E105/E107	×	×	×
NWD-W202	×	×	×
NWD-W253	×	×	×
NWD-W263	×	×	×
NWD-W273	×	×	×
NW-W274S NW-WH303	×	×	×

※1:X-アプリで転送を行ってください。